

Wolf Classrooms

How to Show Cable TV

The Quick Version

After the system is on:

1. Where are you going?
(Press Left or Right display button)
2. What are you sending?
(e.g., DVD or VCR)

Start and set the AV system

- 1 **Touch the screen to wake the control panel. Then touch the picture to start the system.**
 - Screen lowers; projector warms up. Wait for 30-second count
- 2 **Let the system know which screen you want to use.**
 - Press the **LEFT** button (for left projector) or **RIGHT**
- 3 **Select the source you want to use.**
 - Press the **CABLE** button
 - Control buttons for playing cable TV will appear on the touch screen



Select the desired channel



- 4 **Select the channel.**
 - Use the number pad on the screen OR
 - Press **CH+** or **CH-** to go up or down one channel at a time
- 5 **Adjust the volume.**
 - Use the **▲**, **▼**, & **MUTE** buttons
 - The volume level is indicated on the screen

Shut down the system when you're done

1. Press the **MENU** button
2. Touch **Power Off**
3. At the System off confirm screen, touch **Yes Power off**

The screen(s) will go up, and the projector(s) will start a 3-minute cool down. **Thanks for turning off the lights too!**



Popular Channels

Ch 2 CU TV	Ch 24 ESPN	Ch 42 Weather Channel
Ch 4 CBS—KCNC	Ch 25 ESPN-2	Ch 49 C-Span
Ch 6 PBS—KRMA	Ch 27 Fox News	Ch 57 History Channel
Ch 7 ABC—KMGH	Ch 31 Discovery Channel	Ch 58 PBS—KBDI
Ch 9 NBC—KUSA	Ch 33 USA	Ch 60 WGN Chicago

Ch 10 Research Channel
Ch 11 CW2—KWGN
Ch 12 SCOLA
Ch 21 Fox—KDVR
Ch 22 Educational Access

Ch 34 Travel Channel
Ch 36 MSNBC
Ch 37 CNN Headline
Ch 38 CNN
Ch 39 CNBC

CU Law

Ch 74 Wittemyer Courtroom
Ch 75 Carrigan Teaching Courtroom

If you have questions, suggestions, or would like one-on-one training on this or other technologies, please contact:

- Doris Cheung at doris.cheung@colorado.edu or
- Chris Bell at cbell@colorado.edu

Wolf Classrooms

How to Show a DVD or Videotape

Start and set the AV system

- 1 Touch the screen to wake the control panel. Then touch the picture to start the system.
 - Screen lowers; projector warms up. Wait for 30-second count.
- 2 Let the system know which screen you want to use.
 - Press the **LEFT** button (for left screen) or **RIGHT**.
- 3 Select the source you wish to use.
 - Press the **DVD** or **VCR** button. Control buttons for your selected source will appear on the touch screen.
 - Note: if you press VCR, you will see and hear the cable TV signal until you play the videotape.

The Quick Version

After the system is on:

1. Where are you going?
(Press Left or Right display button)
2. What are you sending?
(e.g., DVD or VCR)



To play a DVD



1. Press the player's **Open/Close** button.
2. Place your disc on the tray once it opens.
3. Press the **Open/Close** button again to load your disc.
4. Use the screen's controls to **Stop, Start, Pause, Rewind, or Fast Forward**.

To remove your DVD

- a. Touch the **Stop** symbol on the screen.
- b. Press the **Open/Close** button on the player.

To play a videotape

1. Insert your tape into the VHS slot.
2. Use the screen's controls to **Stop, Start, Pause, Rewind, or Fast Forward**.

To remove your videotape

- a. Touch the **Stop** symbol on the screen.
- b. Press the **Eject** button on the player.



Volume

- Press **▲** or **▼** buttons
- To mute, press the **MUTE** button

Tips

- DVD may be stopped and started like a VHS tape
- VCR will play cable TV until tape plays
- VCR will only pause for 5 minutes

Shut down the system when you're done

1. Press the **MENU** button
2. Touch **Power Off** on the screen
3. At the System off confirm screen, touch **Yes Power off**

The screen will go up, and the projector will start a 3-minute cool down. **Thanks for turning off the lights too!**

If you have questions, suggestions, or would like one-on-one training on this or other technologies, please contact:

- Doris Cheung at doris.cheung@colorado.edu or
- Chris Bell at cbell@colorado.edu



COLORADO LAW
Information Technology