

Wolf Seminar Rooms

How to Show Cable TV

Start and set the AV system

A Touch the screen to wake the control panel. Then touch the picture to start the system.

- Screen lowers; projector warms up. Wait for 30-second count.

B Press **CABLE TV** to the left of the screen.



Select the desired channel



C Select the channel.

- Touch the number keys on the screen keypad OR
- Touch **CH+** or **CH-** to go up or down one channel at a time.

D Adjust the volume.

- Use the **VOL UP**, **MUTE**, & **VOL DOWN** buttons. The volume level is indicated on the screen.

Shut down the system when you're done

1. Press the **MENU** button to left of screen.
2. Touch **Power Off** in the middle of screen.
3. At the **System off** confirm screen, touch **Yes Power off**.

The screen will go up, and the projector will start a 3-minute cool down. **Thanks for turning off the lights too!**



Popular Channels

Ch 2 CU TV
Ch 4 CBS—KCNC
Ch 6 PBS—KRMA
Ch 7 ABC—KMGH
Ch 9 NBC—KUSA

Ch 24 ESPN
Ch 25 ESPN-2
Ch 27 Fox News
Ch 31 Discovery Channel
Ch 33 USA

Ch 42 Weather Channel
Ch 49 C-Span
Ch 57 History Channel
Ch 58 PBS—KBDI
Ch 60 WGN Chicago

Ch 10 Research Channel
Ch 11 CW2—KWGN
Ch 12 SCOLA
Ch 21 Fox—KDVR
Ch 22 Educational Access

Ch 34 Travel Channel
Ch 36 MSNBC
Ch 37 CNN Headline
Ch 38 CNN
Ch 39 CNBC

CU Law

Ch 74 Wittemyer Courtroom
Ch 75 Carrigan Teaching Courtroom

If you have questions, suggestions, or would like one-on-one training on this or other technologies, please contact:

- Doris Cheung at doris.cheung@colorado.edu or
- Chris Bell at cbell@colorado.edu



COLORADO LAW
Information Technology

Wolf Seminar Rooms

How to Show a DVD or Videotape

Start and set the AV system

A Touch the screen to wake the control panel. Then touch the picture to start the system.

- Screen lowers; projector warms up. Wait for 30-second count.

B Press the desired button on the left, DVD or VCR.



To play a DVD



- C**
1. Press the player's **Open/Close** button.
 2. Place your disc on the tray once it opens.
 3. Press the **Open/Close** button again to load your disc.
 4. Touch the screen's controls to **Stop, Play, Pause, Rewind, or Fast Forward**.

To remove your DVD

- a. Touch the **Stop** symbol on the screen.
- b. Press the **Open/Close** button on the player to access your disc.

To play a videotape

- C**
1. Insert your tape into the VHS slot.
 2. Touch the screen's controls to **Stop, Play, Pause, Rewind, or Fast Forward**.

To remove your videotape

- a. Touch the **Stop** symbol on the screen.
- b. Press the **Eject** button on the player.



Volume

- Press the VOL UP/VOL DOWN buttons
- To mute, press the MUTE button

Tips

- DVD may be stopped and started like a VHS tape
- VCR will play cable TV until tape plays
- VCR will only pause for 5 minutes

Shut down the system when you're done

1. Press the **MENU** button to the left of the screen.
2. Touch **Power Off** on the screen
3. At the **System off** confirm screen, touch **Yes Power off**

The screen will go up, and the projector will start a 3-minute cool down. **Thanks for turning off the lights too!**

If you have questions, suggestions, or would like one-on-one training on this or other technologies, please contact:

- Doris Cheung at doris.cheung@colorado.edu or
- Chris Bell at cbell@colorado.edu



COLORADO LAW
Information Technology