

impact™



DLS-G and DLS-J
Digital Light Shed
INSTRUCTIONS

Introduction

Thank you for choosing the Impact Digital Light Shed. This tabletop shooting enclosure features a high-quality translucent fabric housing, making it ideal for photographing jewelry, glassware, and other highly reflective objects. It's also perfect for generating consistently illuminated images for use in catalogs or e-commerce. The translucent material will dramatically reduce unwanted reflections and give you soft, nearly shadowless lighting. The shed can be lit with electronic strobe, fluorescent, tungsten, or LED light sources. With the ability to be lit from all sides and the added convenience of the included white and black sweeps, the Impact Digital Light Shed is the perfect platform for small item photography.

Specifications	DLS-G	DLS-J
Dimensions	35" × 35" × 35" (90 × 90 × 90 cm)	47" × 47" × 47" (120 × 120 × 120 cm)
Weight	3.5 lbs (1.5 kg)	6.25 lbs (2.8 kg)

Features

- Lighting is made simple and efficient, taking less time to erect than conventional lighting solutions
- Portable with easy setup and takedown
- Dual zippered front and top panels for camera lens positioning
- Front panel peels back on all four sides for easy positioning of objects inside

Box Contents:

- Shooting enclosure
- White fabric sweep
- Black fabric sweep
- Storage bag
- User manual

Instructions

Setting Up Your Digital Shed Light



1. Remove the digital light shed from its storage bag.
2. Holding it away from your body, unfold the light shed from its folded, stacked form.
3. The sides of the light shed are folded together into layers. Lift one of the layers from the other as if you were opening a book.
4. With the first layer lifted 90°, grab a corner from inside the layers and pull it out. The light shed will pop open.
5. Peel the touch-fastener cover away from the front opening. This opening gives you access to set up the scene inside the shed.



6. Your kit also includes white and black sweeps, providing more background choices. They can be secured to the shed with the touch-fastener corners.
7. You can shoot through the zipper in the front panel or remove the front panel altogether. With the front panel removed you can rotate the Digital Light Shed and place it over your scene.
8. Additionally, positioning the shed with the top zipper on the side gives you the ability to shoot your scene from many different angles.
9. The dual zippers allow you to place the camera high, low, or in the middle of the light shed.
10. Keep the openings closed to minimize reflections.

Folding for Storage



1. Remove and store the background sweep.
2. Grab a corner and fold it into its opposite, creating an L shape.
3. Be sure the metal support frames are not twisted before folding. The light shed will not properly collapse if any of the frames are twisted. You can straighten a twisted support frame and continue to fold the light shed.



4. Fold the light shed flat.
5. Grasp the light shed as shown. Note that your thumbs should be on opposite sides of the unit.



6. Twist the light shed into a figure-eight shape.



7. Continue twisting and pull the sides together as shown. The sides will pass one in front of the other until they are stacked together.

One-Year Limited Warranty

This IMPACT product is warranted to the original purchaser to be free from defects in materials and workmanship under normal consumer use for a period of one (1) year from the original purchase date or thirty (30) days after replacement, whichever occurs later. The warranty provider's responsibility with respect to this limited warranty shall be limited solely to repair or replacement, at the provider's discretion, of any product that fails during normal use of this product in its intended manner and in its intended environment. Inoperability of the product or part(s) shall be determined by the warranty provider. If the product has been discontinued, the warranty provider reserves the right to replace it with a model of equivalent quality and function.

This warranty does not cover damage or defect caused by misuse, neglect, accident, alteration, abuse, improper installation or maintenance. EXCEPT AS PROVIDED HEREIN, THE WARRANTY PROVIDER MAKES NEITHER ANY EXPRESS WARRANTIES NOR ANY IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. This warranty provides you with specific legal rights, and you may also have additional rights that vary from state to state.

To obtain warranty coverage, contact the Impact Customer Service Department to obtain a return merchandise authorization ("RMA") number, and return the defective product to Impact along with the RMA number and proof of purchase. Shipment of the defective product is at the purchaser's own risk and expense.

For more information or to arrange service, visit www.impactstudiolighting.com or call Customer Service at 212-594-2353.



Product warranty provided by the Gradus Group.
www.gradusgroup.com

IMPACT is a registered trademark of the Gradus Group.
© 2014 Gradus Group LLC. All Rights Reserved.